

WARNING

Must use a coil with a primary resistance of
0.5 to 1.0 OHMS

Use of any higher resistance coil WILL
damage the unit.

This unit requires 12 volts to run all resistors
and resistance wires must be removed or
bypassed

Failure to comply with any of these condi-
tions will VOID warranty

For further information please contact
Southern Rods & Parts Inc.

864-848-0601

www.southernrods.com

