STEERING COLUMN ASSEMBLY INSTRUCTIONS



The following instructions detail the process of installing the shift arm, the turn signal lever, the tilt adjustment lever and the four way flasher knob. It is best to install these things before the column is installed in the vehicle.

Installing Turn Signal Lever



The turn signal lever installs into the left-side hole of the column and attaches to the white self-cancelling mechanism with the provided screw. Do not over tighten.

Installing Shifter Arm (Column Shift Columns Only)

1. Apply grease to the shift arm spring and insert into spring holea screw driver or needle nose pliers may be helpful.

2. Twist the collar of the column until gear indicator indicates the Neutral position if necessary, and position the shift arm into the column, pushing the spring further into the spring hole.

3. Align the hole on the lever to the hole on the column and insert lever pin through both holes. Use a hammer and punch to the lever hole until flush.


Installing Flasher Knob & Tilt Lever

The flasher knob installs easily by threading it into a small hole on the right side of the column, and the tilt lever installs by threading into a hole on the left.

Installing Steering Wheel

- 1. The splines on your steering column is a GM spline for 1969-1994 steering wheels without airbags.
- 2. Make sure the compression spring is installed under the cancelling cam. Position the horn connection post in between 10 and 11 o'clock as shown. There will be a metal spacer on top of the black horn cancelling cam, but under the steering wheel.
- 3. Install the steering wheel or the steering wheel adapter onto the splined column shaft and then thread on the column shaft screw nut and tighten to the desired gap, but do not over tighten.



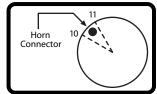

Column Harness Wires

White- brake light switch

Green- right rear turn signal and brake light


Yellow- left rear turn signal and brake light Purple-turn signal flasher

Brown-emergency flasher

Dark Blue- right front turn signal

Light Blue or Gray- left front turn signal Black- horn

> The wiring arrangement is for a GM 41/4" connector. Shown above is the standard GM wiring diagram for this plug.

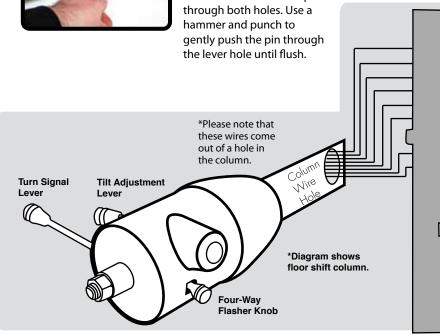

Steering Column and Ignition Switch Wiring

Conversion from GM Wire Color Codes For Ford and Chrysler Applications

Turn Signal & Horn Master Connector

	Port	GM Wire Color	Ford Wire Color	Chrysler Wire Color 1970s	Chrysler Wire Color 1980s
Horn Left Frt Turn Right Front Turn Hazard Power Turn Signal Power Left Rear Turn Right Real Turn Brake Light Input	G H J K L M N P	Black or Lt Grn Lt Blue Blue Brown Purple Yellow Green White	Yellow Green White White Blue Green Orange Green	Black Green Tan n/a Red Dark Green Brown White	Black Lt Green Tan Pink Red Dark Green Brown White
Ignition Switch Connector (White connector) Accessory Battery Power (B+) Ignition Coil + Start		Brown Red Pink Purple	not used Yellow Red White	Black Red Brown Yellow	Black Red Brown Yellow
Ignition Switch Connector (Black connector) Ignition Switch Accessory (uses larger terminal)		Red Orange	Yellow Black	Red Blue	Red Blue
White Connector Pink Wire Orange Wire Purple Wire Red Wire Red Wire					

Neutral Safety and Back Up Light Switch

The neutral safety switch and the back up light switch are combined into a single unit which is mounted on the lower portion of the steering column. The neutral safety switch interrupts power from the ignition switch to the starter solenoid (usually a purple wire) when the shifter is in any position other than park or neutral.

*** Use original connectors or insulated spade terminals

on connections

Back up Light Terminals

Neutral Safety Terminals are stacked