
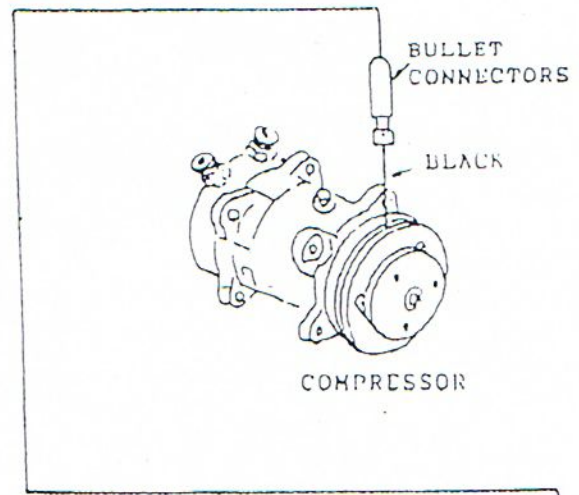


# WIRING DIAGRAM

+12v POWER SOURCE CAN EITHER BE CONNECTED ON THE INSIDE OF THE PASSENGER COMPARTMENT OR ENGINE COMPARTMENT AND SHOULD BE CONNECTED TO A WIRE THAT TURNS ON AND OFF WITH THE IGNITION

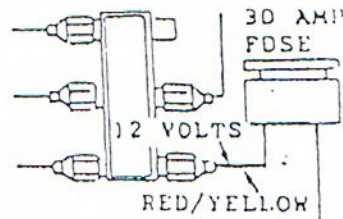

## TRIM LINE WITH DEFROST

### PASSENGER COMPARTMENT

