


COMPRESSOR BRACKET ADAPTOR

FITS: CHEVY V-6 - 4.3L, V-8 - 5.0, 5.7L W/POWER STEERING/AIR PUMP/FUEL INJ.

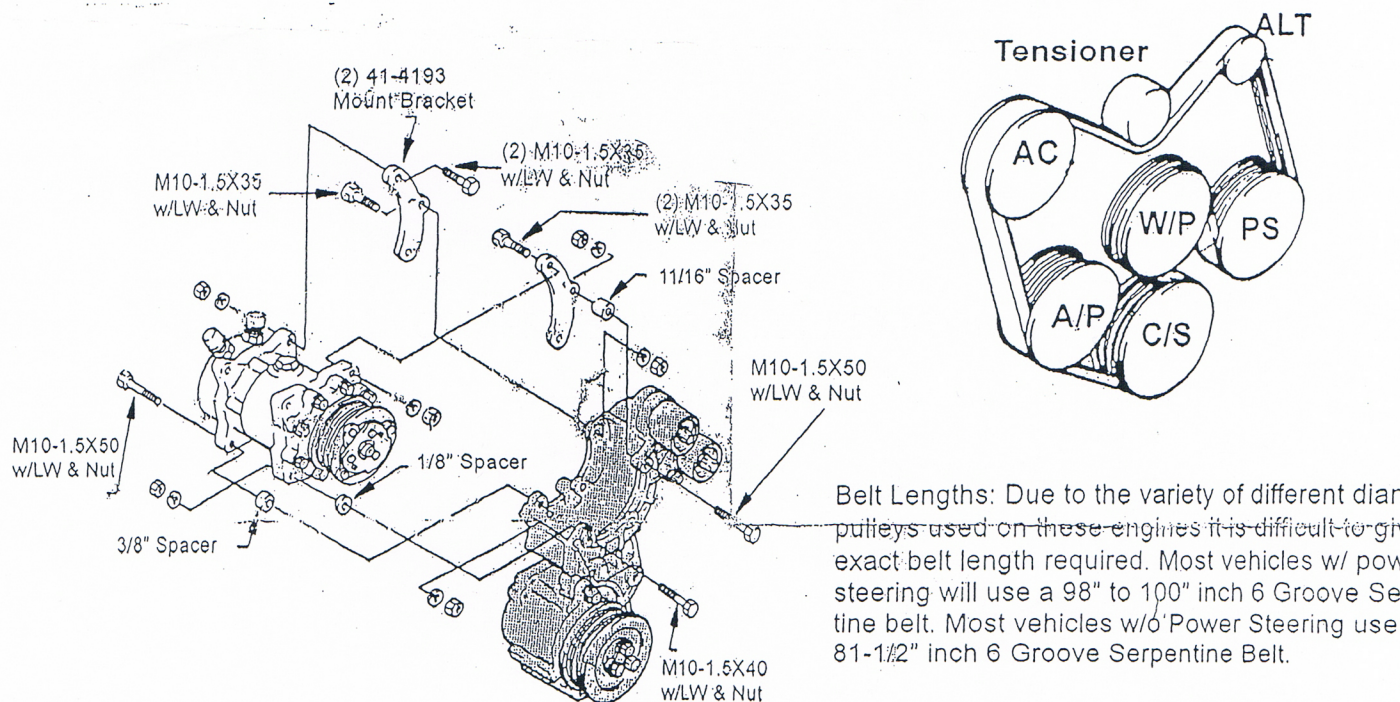

INSTALLATION INSTRUCTIONS

1. Disconnect Battery Cable. (Negative or Ground)
2. Remove original R-4 Compressor (or O.E.M. Idler Assembly if equipped)
3. Loosely install the compressor mounts to original bracket assembly. See drawing for proper position and spacers to be used.
4. Loosely install compressor to compressor mounts and original bracket assembly as shown in drawing. Refer to drawing for proper hardware and spacers required.
5. Tighten all mounting bolts securely.
6. Install Belt, See diagram as guide
7. Re-check all mounting bolts to make sure they are secure.
8. BEFORE STARTING ENGINE - Check for proper clearance of radiator & heater hoses, oil lines, fuel lines, belt and compressor clutch.