


# Condenser Orientation

Illustration 2-3


## Pre-1948

(Pt# 100012)

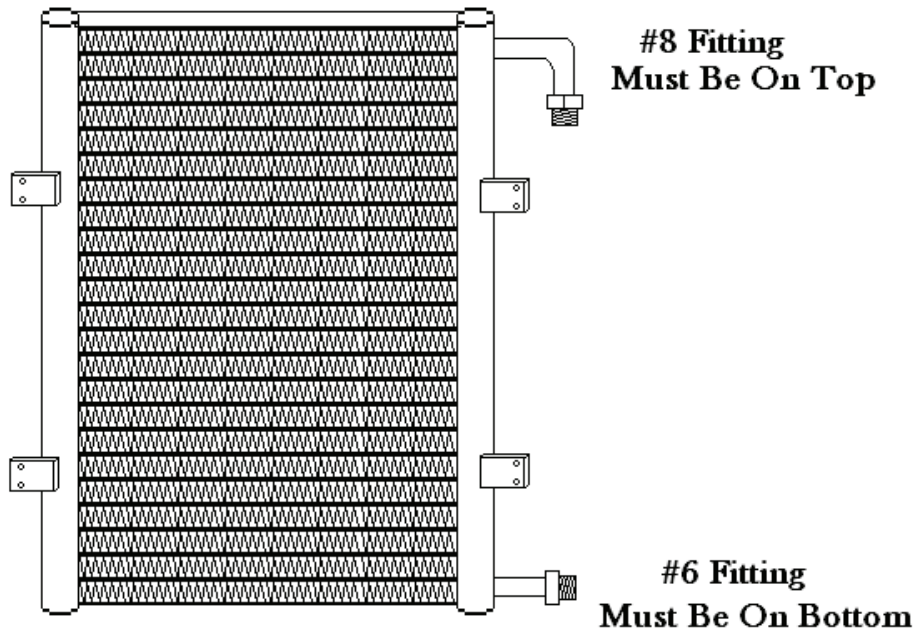

## Post-1948

(Pt# 100009)

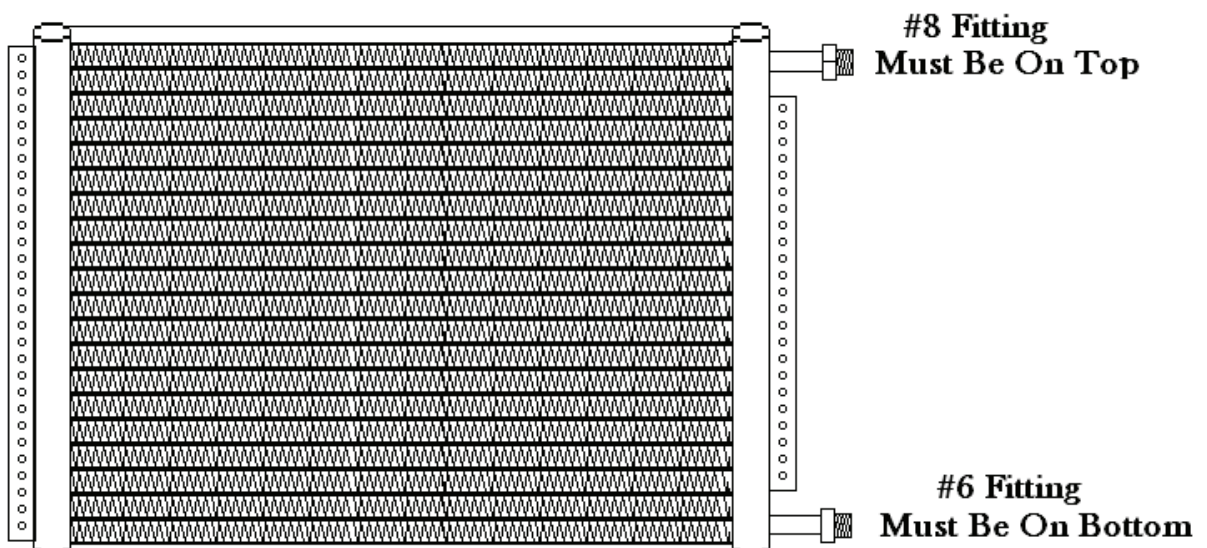


Pre-48 and Post-48 is a general recommendation. Measure your radiator to determine if you would prefer one or the other for your application.

Condensers may be mounted with the fittings on the passenger side or the drivers side, however the condser **MUST** always have the larger (#8) fitting on top and the smaller (#6) fitting on the bottom.

# AC Compressor Mounting


Fig. 3-2

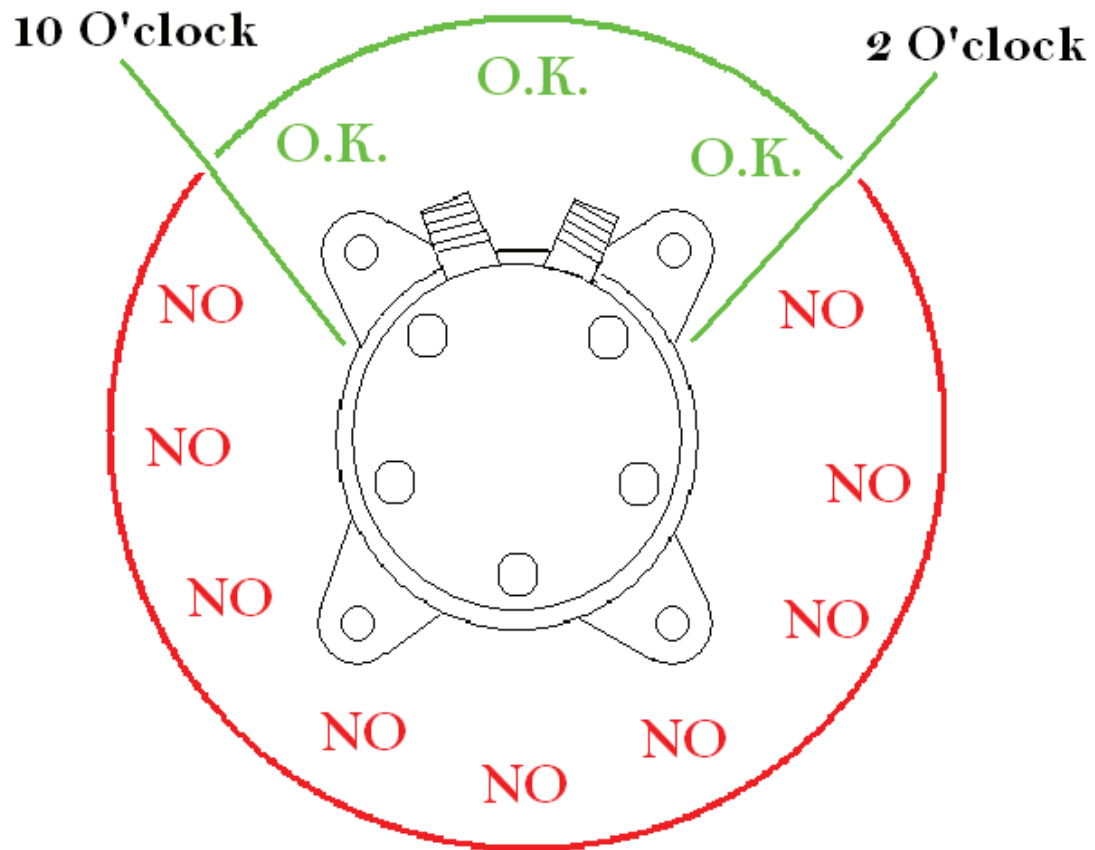


Suction And Discharge Fittings Must  
Not Be Rotated Past 10 Or 2 O'clock

# AC DRIER AND HOSE ROUTING

Illustration 3-2

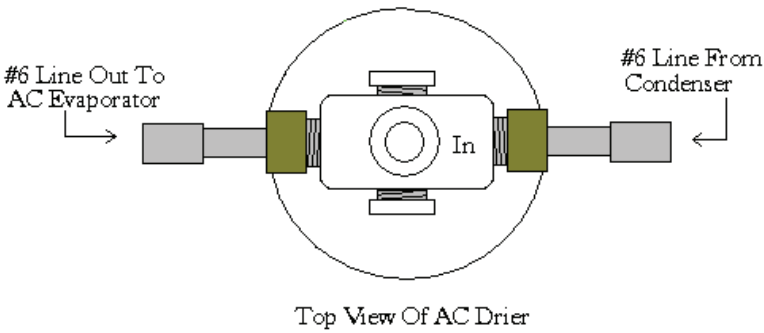


## AC HOSE ROUTING

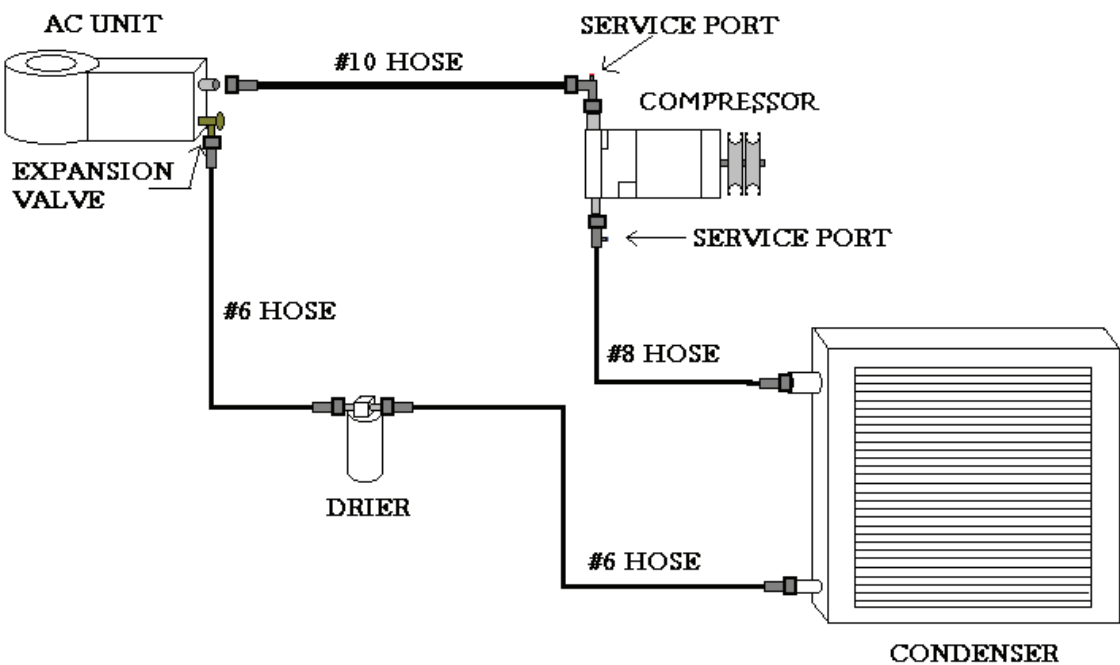

## LOCATION OF OPTIONAL BINARY SWITCH OR TRINARY SWITCH

Illustration 3-5

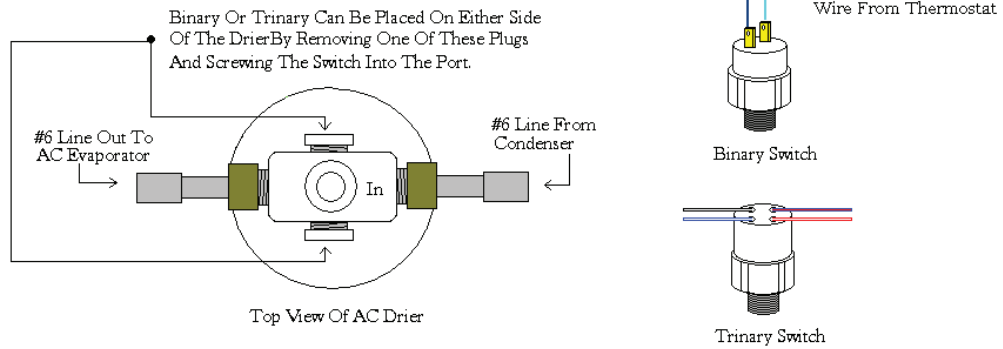

## *TRINARY SWITCH WIRING INSTRUCTIONS*

