

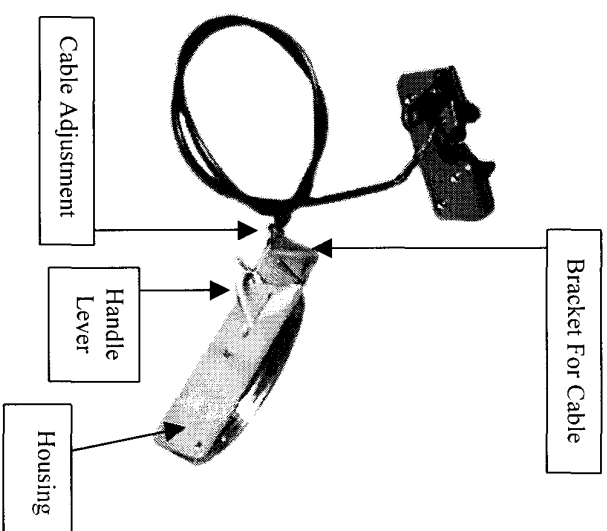


## Mounting Your Inside Door Handle


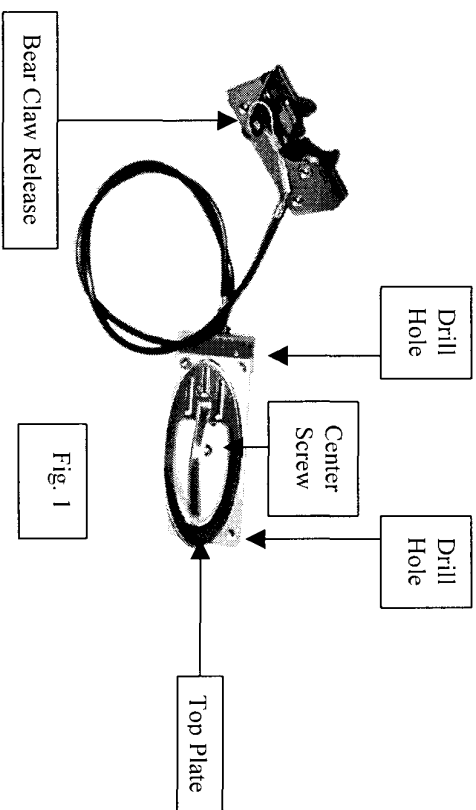


1. Remove center screw (Fig.1)
2. Remove the top plate (Fig.1)
3. Hold the door handle housing to the area you wish to mount door handle (Fig.2)
4. Drill four mounting holes in the door (Fig.1)
5. Cut a slot in the door for handle lever (Fig.2)
6. Mount housing on door with two #8 screws (Fig.2)
7. Hold cable bracket inside of the door (Fig.2)
8. Hold bracket against the door then install 2 #6/32 bolts through the door to the cable bracket (Fig.2)

1720 Wilson Ave. Girard, Ohio 44420  
(888) 539-6295

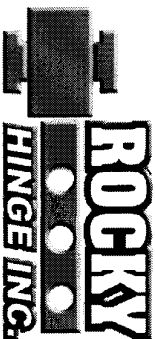


## Adjusting Your Inside Door Handle

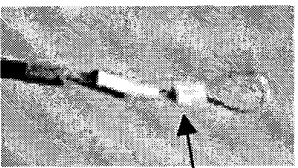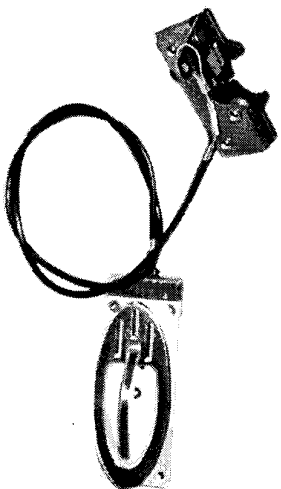

Crimp to  
bear claw latch release

Cable Adjustment

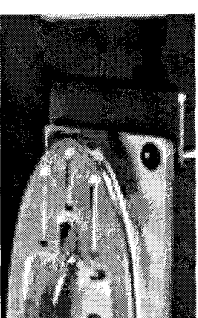

9. Crimp the end of the cable to the bear claw release (Fig. 3)

10. Adjust the cable by turning the screw to loosen or tighten cable (Fig. 4)

1720 Wilson Ave. Girard, Ohio 44420  
(888) 539-6295

